



ENGINEERING BULLETIN

Bulletin Number: 07-002 Date: May 21, 2007

Engineering Change:

Adding a Login to the Xperts for DPAS data recovery

System: Xpert, XDark and 9210 Data Collection Platforms

Originator: Warren Krug warren.krug@noaa.gov

Approved by MSCB on May 21, 2007

This bulletin describes the procedure of adding a login to the Xpert so DPAS can log on to the station and recover missing data.

Use Xterm to log on to the system as Super, go to the Main Menu, click on the Setup tag

Subron 9210

Main Setup Sensors Data Log Status

Station Info

Date/Time: ...
12/19/2006 04:34:18

Station name: ...
85747281

Station Status


Recording:
ON+TX Stop

Alarm Status:
NORMAL Clear


Logout

Rx Tx
Xp Err
File Transfer
Set Clock
Connect
Upgrade
Status
Web Server
Auto Update


On the Setup menu, Use the down arrow bar so that User appears

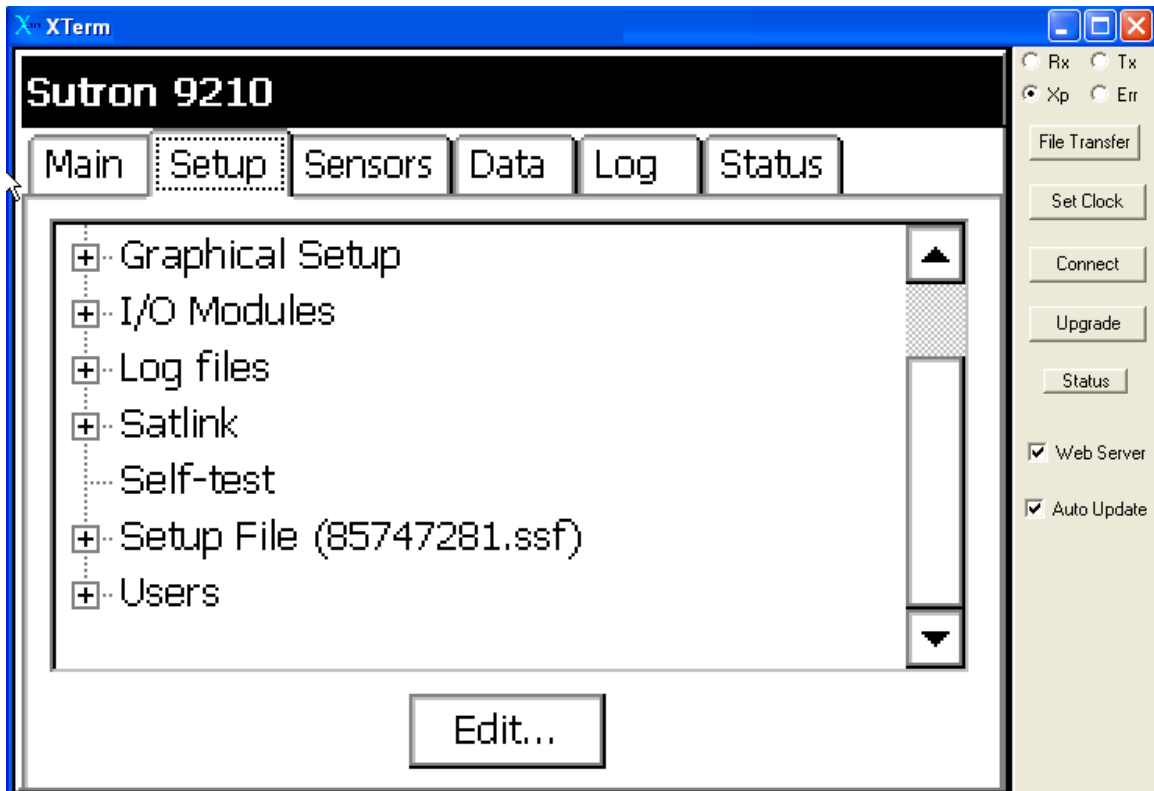

Highlight User, click on the EDIT box

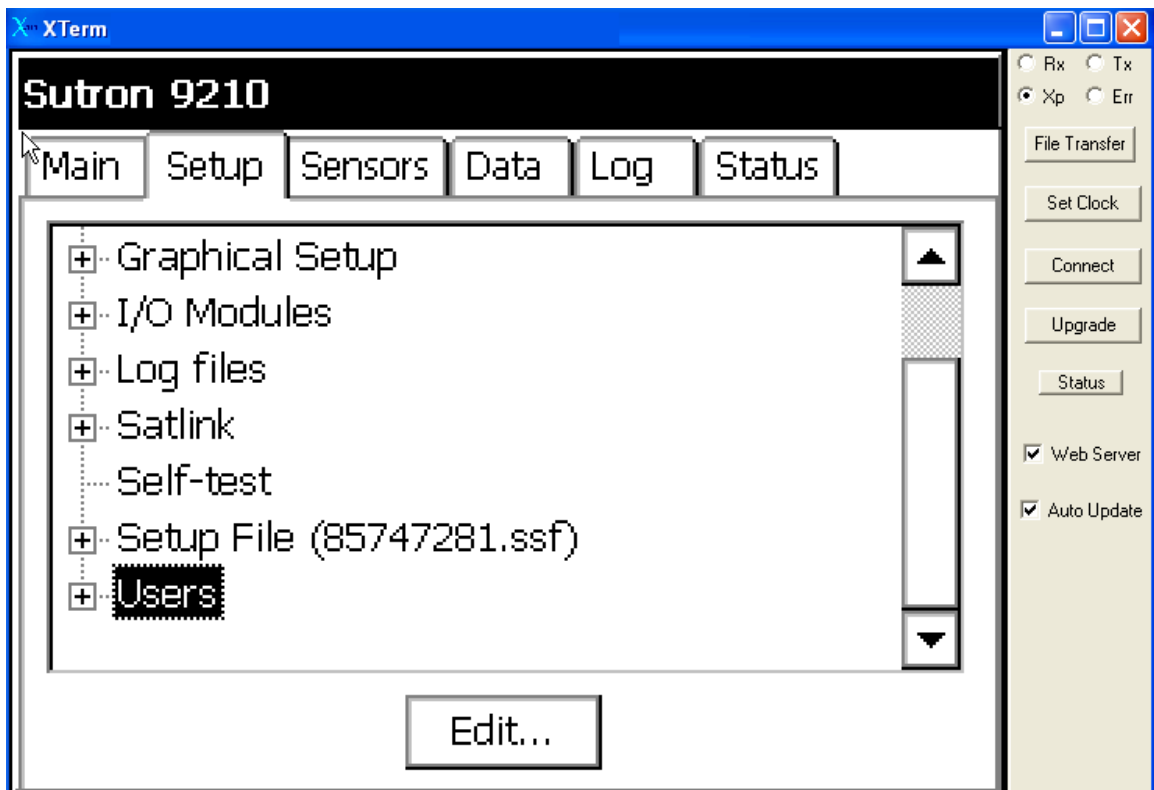

You will now see the Edit box for Users

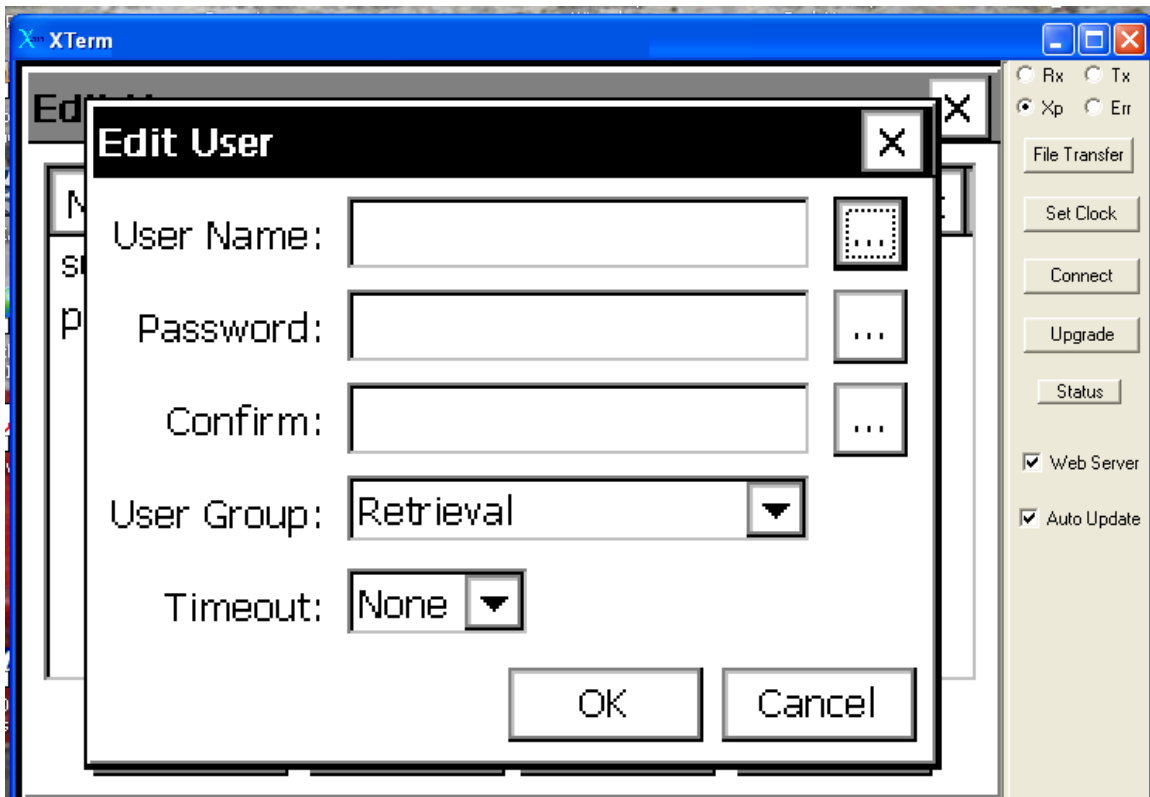

In the User Name: block type in a username


In the Password: block type in a password the system will show a * for each letter you type

In the Confirm: block type in the same password the system will show a * for each letter you type

In the User Group: block, use the pull down arrow and select Retrieval

In the Timeout: block, use the pull down arrow and select 60 min

The screen should look like this

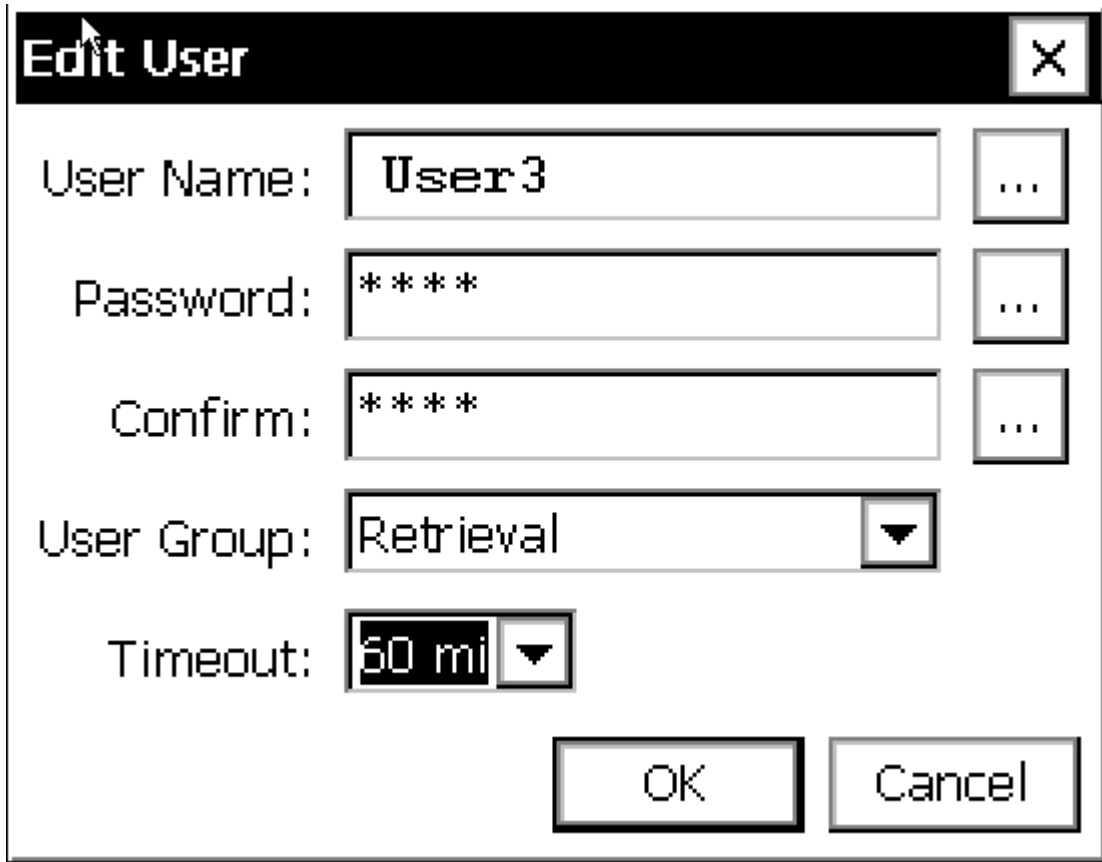


The 'Edit User' dialog box contains the following fields and controls:

- User Name:** Text input field containing 'User3'.
- Password:** Password input field containing '****'.
- Confirm:** Password input field containing '****'.
- User Group:** Dropdown menu showing 'Retrieval'.
- Timeout:** Dropdown menu showing '60 mi'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Press OK to complete the process.

You will now see the Edit Users Screen

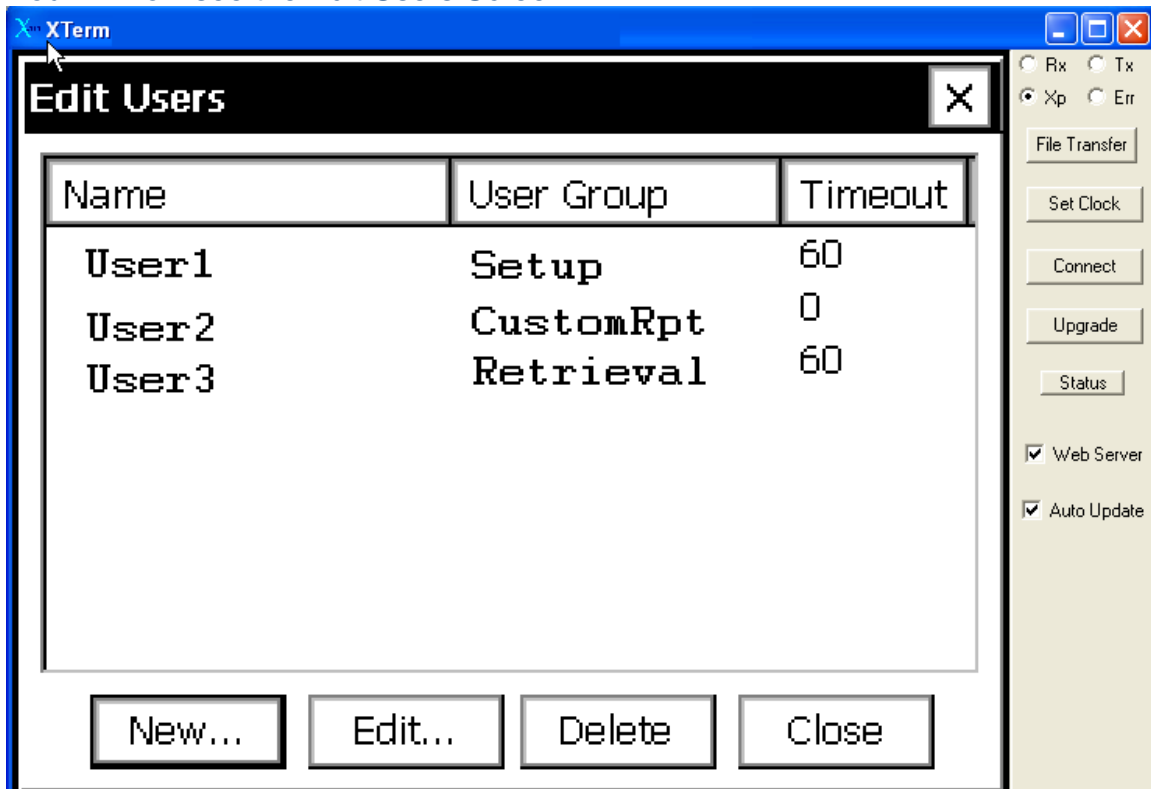

The 'Edit Users' screen displays a table of users and includes a sidebar with various controls.


Name	User Group	Timeout
User1	Setup	60
User2	CustomRpt	0
User3	Retrieval	60

Buttons: 'New...', 'Edit...', 'Delete', and 'Close' are located at the bottom.


Sidebar Controls:

- Radio buttons: Rx, Tx, Xp (selected), Err.
- Buttons: File Transfer, Set Clock, Connect, Upgrade, Status.
- Checkboxes: Web Server (checked), Auto Update (checked).

Press Close to go back to the Setup screen

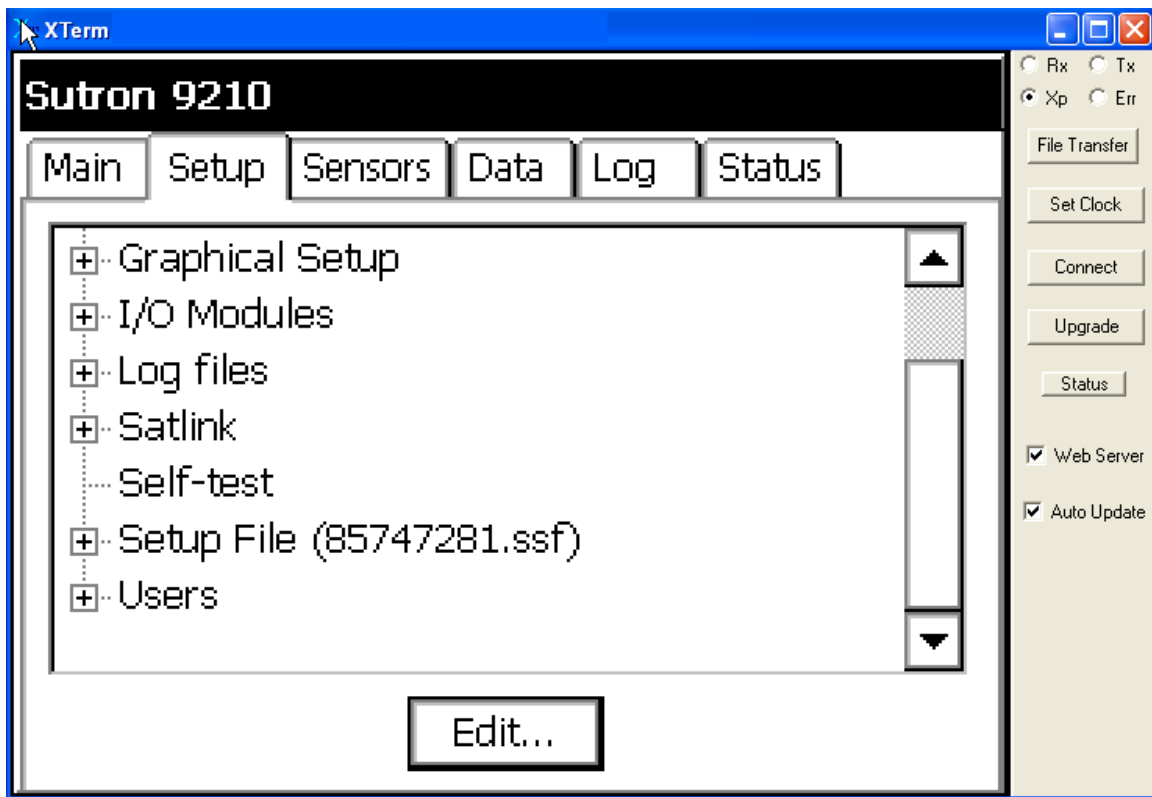

Press Main to go back to the Main Menu

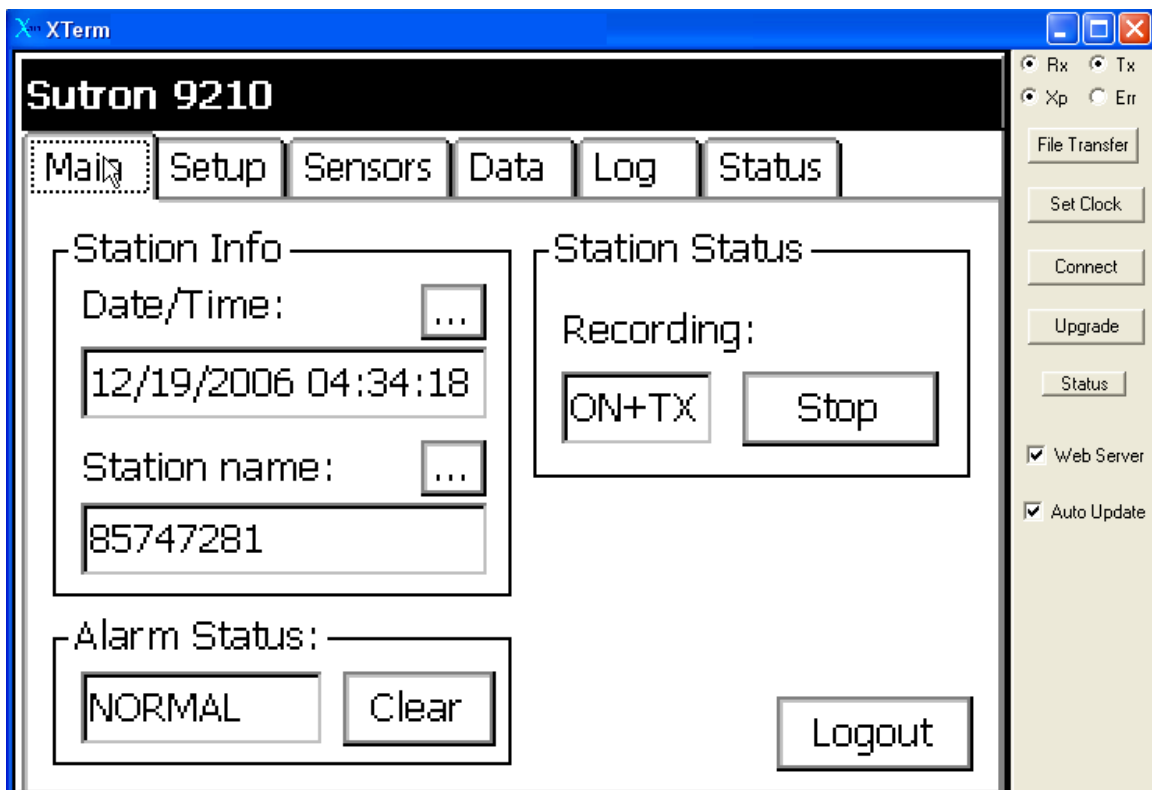

Press Logout to exit the system

Notes: